



USER GUIDE: 60 & 120 SEATER HYBRID CLASSROOM

STEP 1: TURN ON THE PODIUM RACK POWER.

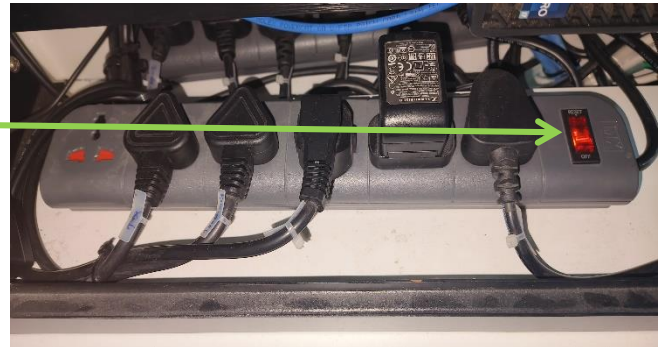

STEP 2: TO TURN ON THE PROJECTOR, PRESS THE FOLLOWING BUTTON ON THE REMOTE.

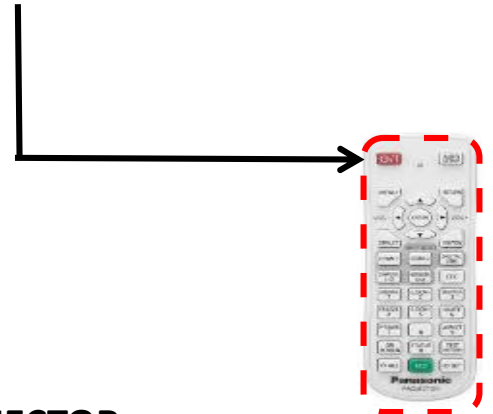

STEP 3: TURN ON THE PODIUM PC.

CONNECTION OF LAPTOP/IPAD TO PROJECTOR

STEP 4: USE THE PROPER CONNECTOR TO CONNECT THE LAPTOP OR IPAD TO THE HDMI CABLE ON THE PODIUM (FOR EXAMPLE, HDMI TO USB C). ADDITIONALLY, RING ADAPTER (HDMI TO USB C OR HDMI TO MINI DISPLAY) CAN BE UTILIZED.



Note: Please turn off the projector only after class.

USE OF MICROPHONE FOR CLASS TEACHING

STEP 5: PRESS THE MICROPHONE'S POWER BUTTON TO TURN ON THE MIC SYSTEM AND KEEP IT IN UNMUTE MODE SO THAT YOU CAN SPEAK.



Note: Please notify the AV Engineer if the microphone battery level is low (one level).



Note: After class, turn off the microphone and put it inside the podium's tray.

STEP 6: MIXER BUTTON FOR GAIN.



Note: Do not press any other mixer buttons.




Use of Camera for Class teaching

STEP 7: TO TURN ON THE CAMERA, PRESS THE FOLLOWING BUTTON ON THE REMOTE




Choose the necessary camera source on Zoom, Google Meet, or any other platform.


Please select this (**UNITE 200 Pro**) for the board camera.

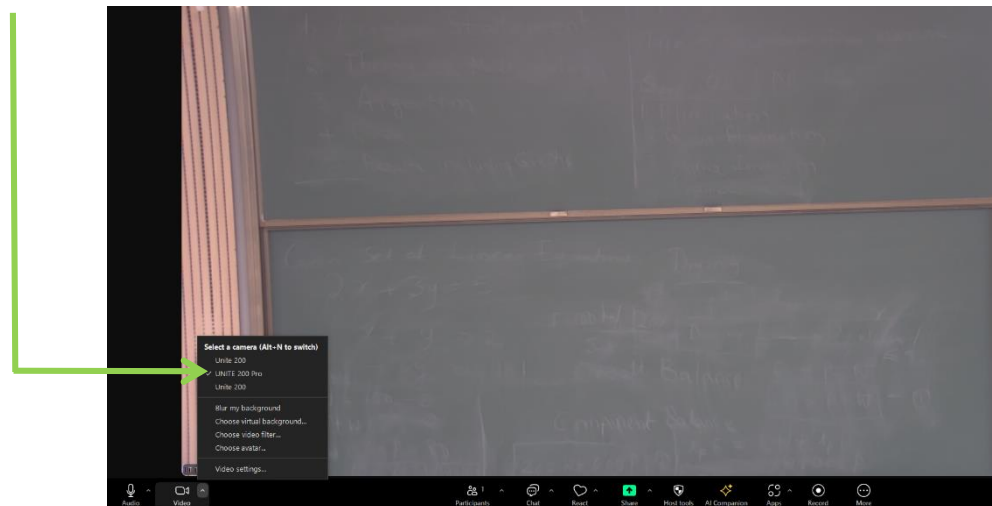

Please select this (**UNITE 200**) for the student camera.

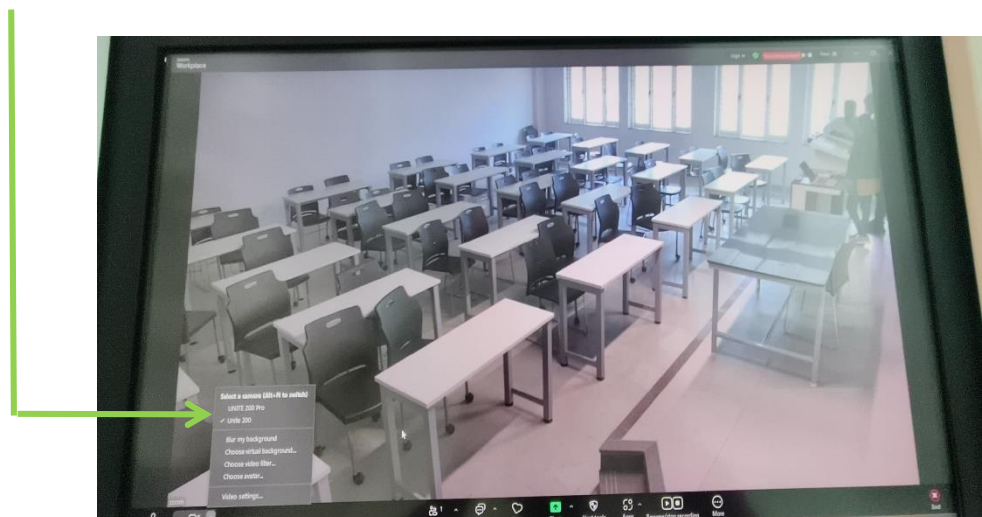

KRAMER BUTTON PANEL CONTROL

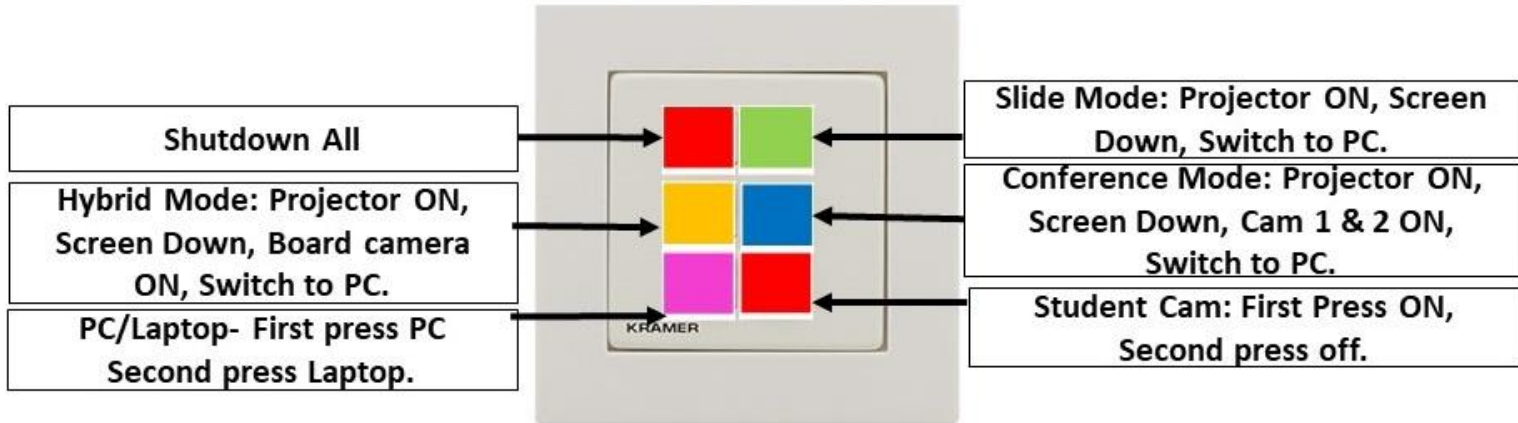

TROUBLESHOOTING STEP:

STEP 1: MAKE SURE THE PODIUM RACK, PROJECTOR AND THE SCREEN HAVE POWER.

STEP 2: MAKE SURE THAT THE PROJECTOR AND SCREEN REMOTE HAVE BATTERIES.

STEP 3: MAKE SURE THAT THE PC IS TURNED ON.

STEP 4: FOR MORE ASSISTANCE, CALL AV SUPPORT ENGINEER.

Contact NO: 9908721346, 8977499936.