Toshiba E-Studio 6528A – Password Setting

1.Open Control Panel.



2.Click on View Devices & Printers



3. Then Click on **Printers & Devices**.

← Settings		- o ×
UT-TPT Local Account	Bluetooth & devices	
▲ × ٩ ☆ Home System ③ Buetooth & devices	+ Add device	
Network & internet		
/ Personalization	View more devices	
Apps	Bluetooth Discoverable as "DESKTOP-OTE645" On	
Secounts		
3 Time & language	m Devices	
🖘 Gaming	Mouse, keyboard, pen, audio, displays and docks, other devices	
* Accessibility	Printers & scamers	
 ★ Accessibility ♥ Privacy & security 	Printers & scanners Preferences, stoubleshoot	
 ★ Accessibility ♥ Privacy & security ♥ Windows Update 	Printers & scanners	
X Accessibility Privacy & security Windows Update	Printers & scanners Preferences, troubleabloas Mobile devices Instantify scores your mobile devices from your nc Constraint acameras, default image settings	
Accessibility Privacy & security Windows Update	Printers & scanners Mobile devices instandy access your mobile devices from your PC Carriers Concesta carrens, default image settings Concesta carrens, default image settings Scanners Mocuse Buttow, mouse pointer speed, scaling Scanners	
 Accessibility Privacy & security Windows Update 	Printers & scamers Printers & scamers Printers & scamers Printers & scamers Mobile devices instantly access your mobile devices from your 7C instantly access your mobile devices from your 7C Cameras Comeras Comeras Devices, mouse publice usered, screeling Printers Printers Intelling Printers P	
 Accessibility Privacy & security Windows Update 	Printers & scanners > Implemented, traditional > Implemented, traditional > Implemented, traditional > Implemented contrast, default image settings > <tr< th=""><th></th></tr<>	
 Accessibility Privacy & security Windows Update 	Printers & scanners > Implementer, traditional devices from your rc > Implementers, default image settings > <td< th=""><th></th></td<>	

4. After Clicking on Printers & Scanners, the list of printers which is already installed in PC will appear on screen.

← Settings			- o ×
Local Account	Bluetooth & devices > Printers & scanners		
Find a setting Q.	Add a printer or scanner	Refresh	
A Home	HPD470D1 (HP LaserJet Pro M329) Printer, Scanner	Add device	
System	HP LaserJet Pro M329 [7BC9C4] Printer, Scanner	Add device	
Bluetooth & devices Network & internet	Brother DCP-87535DW series [b42200d43cc9] Multi Function Printer, Printer, Science	Add device	
Personalization	Pinter NPIE7FEB2 (HP Laser/et M208dw)	Add device	
Apps	HP Smart Tank 530 (009771) Printer, Iniviet printer, Sanner	Add device	
 Accounts Time & language 	Brother DCP-875350W series (b422008b0cdb) Malif Fundion Plater States	Add device	
🐼 Gaming	HP Laseriet Tank MFP 1005W (85D0D6) Mold Function Biology (85D0D6)	Add device	
X Accessibility	The printer that I want isn't listed Show Wi	-Fi Direct printers Add manually	
Windows Update	HP Laserlet Pro M329 Not connected	>	
	Microsoft Print to PDF	>	
	OneNote (Desktop)	>	
	Printer preferences		
	Let Windows manage my default printer	On 💽	
	Download drivers and device software over metered connections Data charges may apply	Off	
Upcoming Earnings	📕 Q. Search 🏾 🏷 🖬 💭 🐂 💽 🗃 💿 🕺 🙅		∧ 🚳 ^{ENG} ⊕ ⊄0 16-17 💂

- 5. Click on the already installed Toshiba machine in the list.
- 6. After clicking on the machine, the properties and settings of the Toshiba Machine.

Click on the **Printing Preferences.**

Find a setting	C TOSHIBA Universal PS3 Printer status: Idle	Remove
Home System	Printer settings	
8 Bluetooth & devices	Open print queue	C
 Network & internet Personalization 	Print test page	P
Apps		
Accounts	Run the troubleshooter	Ċ
Gaming	Printer properties	C
X Accessibility	Printing preferences Orientation, page order, pages per sheet, borders, paper source	Č
Privacy & securityWindows Update	Hardware properties	C
	More devices and printers settings	C

7. After selecting the Printing Preferences, Select the **Others** Option in Opened dialog box.

rint Job:	Original Danar Cizer
Normal Drint V	Original Paper Size:
	Letter (8 1/2 x 11")
	Print Paper Size: Image Scale:
I MARINA DIA	Same as Original Size V 100 + %(25-400)
7.	Paper Source:
	Auto ~
	Paper Type:
	Plain (16-21lb.bond) V
100%	Destination:
1.2.3	Exit Tray ~ A4 A3
Settings	
Profile:	Number of Copies: 1 (1-9999)
None ~	Orientation:
Save Profile Delete	Portrait Candscape
Rules Based Printings	
Restore Defaults	

8. Enter your department password in **Department Code** Section then click on apply and select **Ok**.

Basic Finishing Paper Handling	Image Quality	Effect	Others	Templates		
Print Job:	Defaul	t Menu	Setting:			
Normal Print 🗸	Basic		~		<u>> Top/</u>	Access
	Toner Sav Do not P	/e rint Blan	ik Pages	Letterhead Off On (For On (For	Print Mode 2-Sided printin all printing)	g only)
		ommuni	ication		SNMP	Settings
		Output	Device	s	Add	Printer
100% Letter		Custo	om Pape	er Size		
1.2.3	User name (Alias):	IIT-	ТРТ		
Settings	Department	Code:				
Profile:	Hide Dep	artment	t Code(Z)		
None ~	Project Cod	e(K):				
Save Profile Delete	Custom Set	tings File	e:	Import	t	Export
Rules Based Printings						

9. After clicking on ok, you can start to use your printer.