



## USER GUIDE: 60 & 120 SEATER HYBRID CLASSROOM

**STEP 1:** TURN ON THE PODIUM RACK POWER.

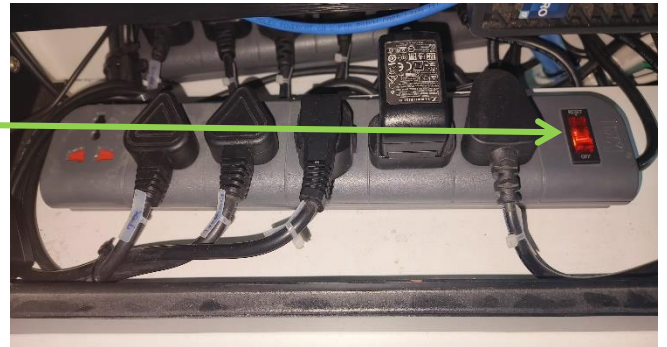

**STEP 2:** TO TURN ON THE PROJECTOR, PRESS THE FOLLOWING BUTTON ON THE REMOTE.

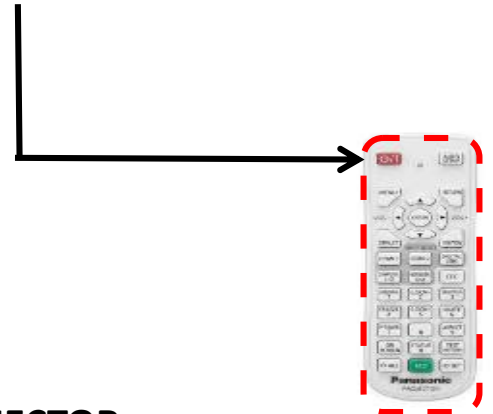

**STEP 3:** TURN ON THE PODIUM PC.

### CONNECTION OF LAPTOP/IPAD TO PROJECTOR

**STEP 4:** USE THE PROPER CONNECTOR TO CONNECT THE LAPTOP OR IPAD TO THE HDMI CABLE ON THE PODIUM (FOR EXAMPLE, HDMI TO USB C). ADDITIONALLY, RING ADAPTER (HDMI TO USB C OR HDMI TO MINI DISPLAY) CAN BE UTILIZED.



**Note:** Please turn off the projector only after class.

## USE OF MICROPHONE FOR CLASS TEACHING

**STEP 5:** PRESS THE MICROPHONE'S POWER BUTTON TO TURN ON THE MIC SYSTEM AND KEEP IT IN UNMUTE MODE SO THAT YOU CAN SPEAK.



**Note:** Please notify the AV Engineer if the microphone battery level is low (one level).



**Note:** After class, turn off the microphone and put it inside the podium's tray.

**STEP 6:** MIXER BUTTON FOR GAIN.



**Note:** Do not press any other mixer buttons.


## Use of Camera for Class teaching

**STEP 7:** TO TURN ON THE CAMERA, PRESS THE FOLLOWING BUTTON ON THE REMOTE




Choose the necessary camera source on Zoom, Google Meet, or any other platform.


Please select this (**UNITE 200 Pro**) for the board camera.

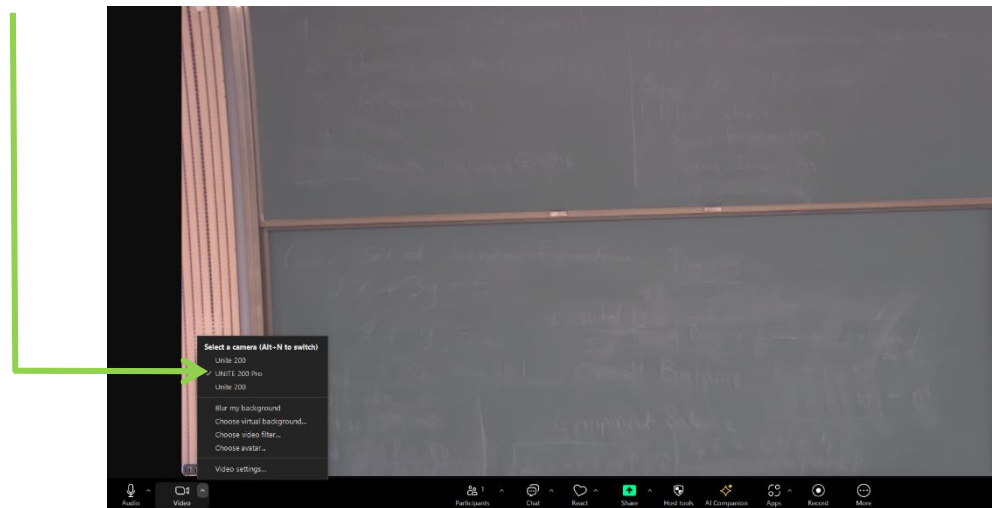

Please select this (**UNITE 200**) for the student camera.

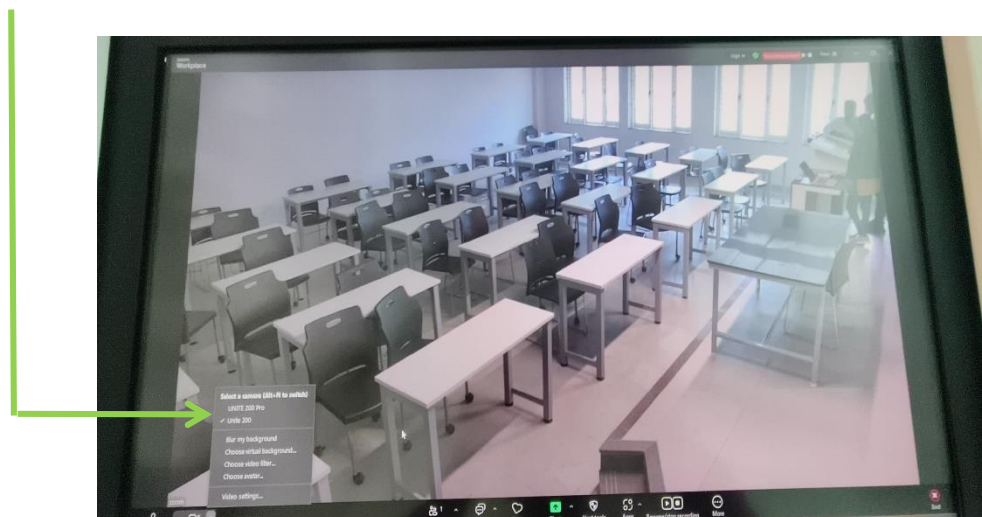

## KRAMER BUTTON PANEL CONTROL

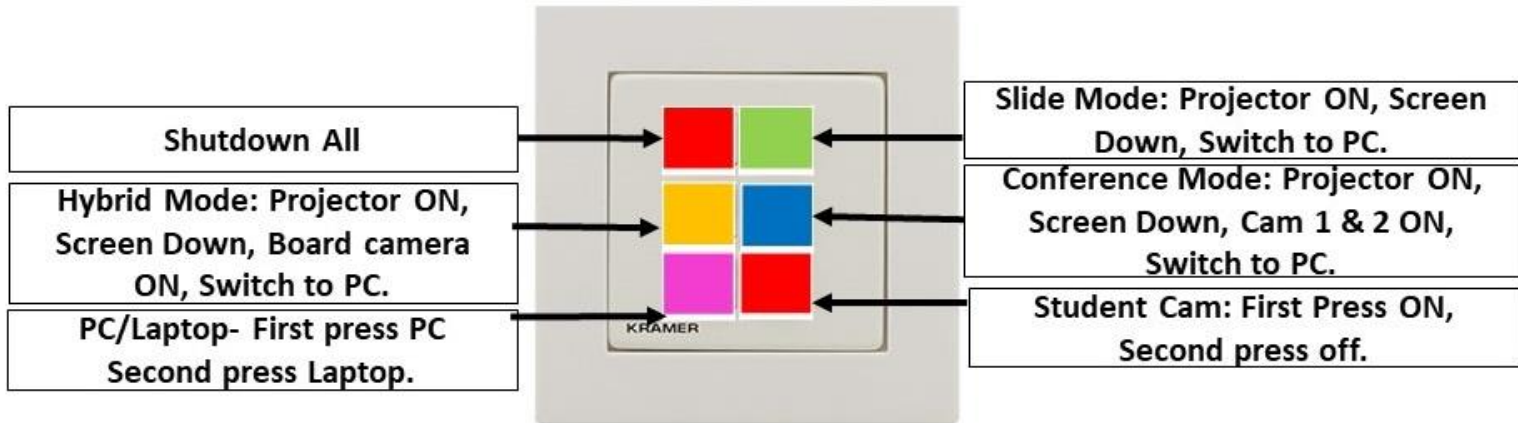

## TROUBLESHOOTING STEP:

**STEP 1:** MAKE SURE THE PODIUM RACK, PROJECTOR AND THE SCREEN HAVE POWER.

**STEP 2:** MAKE SURE THAT THE PROJECTOR AND SCREEN REMOTE HAVE BATTERIES.

**STEP 3:** MAKE SURE THAT THE PC IS TURNED ON.

**STEP 4:** FOR MORE ASSISTANCE, CALL AV SUPPORT ENGINEER.

**Contact NO: 9908721346, 8977499936.**